



**Automated Finishing for HP Multi Jet Fusion Technology
With Aerosport Additive**

PostPro3D


Aerosport Additive utilizes Additive Manufacturing Technologies (AMT)'s PostPro3D® patent pending technology as a service for part finishing on 3D printed parts we manufacture or are provided to Aerosport Additive for finishing. The PostPro3D is a smart and automated post processing solution for thermoplastic polymer 3D Printed parts. PostPro3D® is a CE and UL listed machine and is based on AMT's proprietary BLAST™ process (Boundary Layer Automated Smoothing Technology).

The BLAST process is a physical-chemical-based process that can smooth a wide variety of thermoplastic polymers that are printed in MJF, SLS or FDM 3D printing technologies. The process is non-line-of-sight and can smooth complex internal cavities of polymer parts. The PostPro3D technology is highly controllable, allowing reproducible results with no degradation of a parts' mechanical properties.

Using a series of pre-defined parameter sets and algorithms, PostPro3D® achieves for the first time a surface finish that matches injection molding techniques. This enabling technology reduces lead-time, cost of manufacture, operational and maintenance costs providing our customers the 'missing piece' in the digital manufacturing chain.

PostPro3D® makes part surface finishing cost and speed competitive for high volume production.

This white paper details the results of extensive testing carried out on HP's MJF PA12 material.

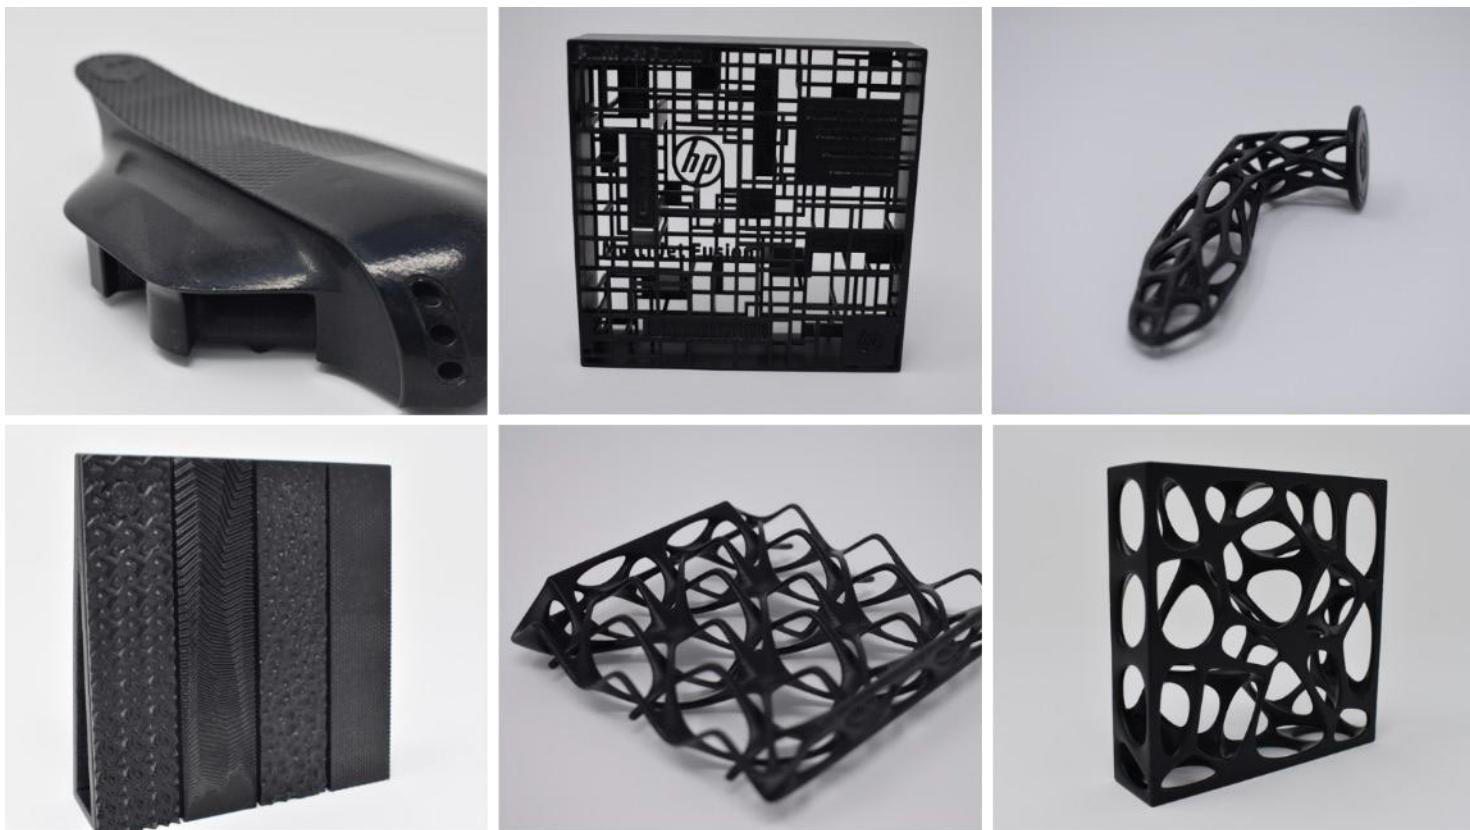

Page 2 of 10



614-834-5227



info@aerosportmodeling.com

Materials

PostPro3D has been designed to process thermoplastic polymer materials. Currently the technology can process Polyamide (Nylon) (6,11,12), Flame retardant Nylons, Carbon/Glass filled derivatives of Nylons, Thermoplastic Amide (TPA), Thermoplastic polyurethane (TPU), and Thermoplastic Elastomers (TPE). This white paper focuses on HP's Nylon 12 material.

Testing Methodology

Three sets of HP MJF samples each containing three HP calibration pieces (pyramid, heart and plate) were processed to a pre-defined level of surface finish denoted as Finish 1 – Finish 3. Additionally, ASTM D638 TYPE I tensile test samples were processed for the evaluation of surface roughness, dimensional tolerance and mechanical property changes. The samples were printed using an HP MJF 4200 printer and supplied by HP.

Part Preparation

For best results, the parts must be depowdered prior to processing with PostPro3D. The following shows the surface conditions of the non-depowdered, 'as printed' parts to those after being depowdered and then finally after being processed by PostPro3D.



Printed Part Design Considerations

The BLAST process is non-abrasive, as it re-distributes the surface material instead of removing it. Therefore, the process does not damage the delicate structures of the parts. Bores with a diameter as small as 0.3 mm can be smoothed with the BLAST process.




It should be noted that the processing uniformity of MJF parts depends on the thickness of parts' wall sections. Parts with a significant variation in wall thickness may encounter difficulty during processing. The minimum part thickness that can reliably be processed varies depending on the material and printing conditions. Generally, the recommended part thickness for best processing results is no less than 1 mm.



Improving Surface Roughness

The PostPro3D technology smooths the surface of a polymer part using a program with a selection of a predefined set of parameters. Each set of samples was processed in separate batch using a different parameter set. Each complete process run took 1 hour.


The surface roughness of the samples was measured using Mitutoyo Surftest SJ-210 surface roughness measurement device with the stylus tip radius of $2\mu\text{m}$, tip angle 60° and measuring force 0.75kN . Five measurements at different areas of each surface were made before and after processing and the average taken. This was performed in accordance with ASTM standard ASTM D7127. The three standard surface finishes are compared to unprocessed (as printed) surfaces as shown below. *Note the repeatability of the smoothed surfaces is demonstrated by the small standard deviation.*

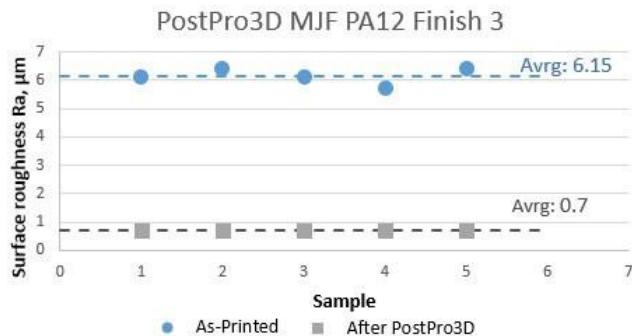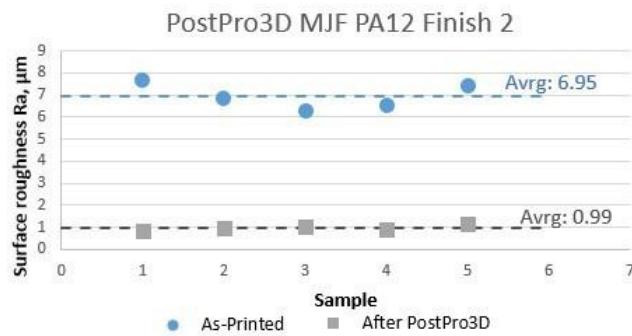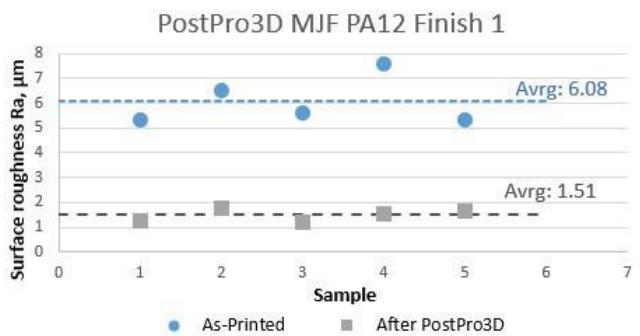

Mechanical properties

Ultimate tensile strength, elongation at break and Young's modulus were measured for the processed and un-processed PA 12 samples. Samples were prepared to ASTM D638 Type 1 dimensions. The gauge length of the tensile testing machine was 50mm and tested at a speed of 5mm/min.

The results show no loss in Ultimate Tensile Strength in processed samples. Elongation at Break (EAB) of the tested samples has significantly increased, whereas the Young's Modulus decreased. The increase in EAB can be explained by the reduction of crack initiation sites on the polymer surface due to the removal of surface porosity, as shown in the microscopy image below. The results are summarized in the table below:



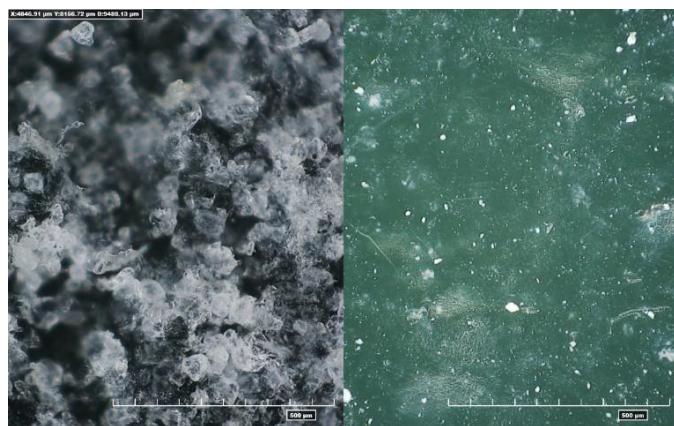


Samples	Young's Modulus, MPa	Ultimate Tensile Strength, MPa	Elongation at Break, %
MJF PA12 As-printed (unprocessed)*	1800	48	20
MJF PA12 Finish 1	1486	47	27
MJF PA12 Finish 2	1572	49	26
MJF PA12 Finish 3	1535	48	26

*HP materials datasheets: HP 3D High Reusability PA 12.


Dimensional Variation

Parts processed in the PostPro3D machine exhibit no more than 0.4%-dimensional change irrespective of desired finish level. This negligible dimensional variation results in the retention of part tolerances and retention of fine feature details. *Note there is no trend in variation of each finish, i.e. Finish 3 does not necessarily make parts thicker/thinner than Finish 1.*

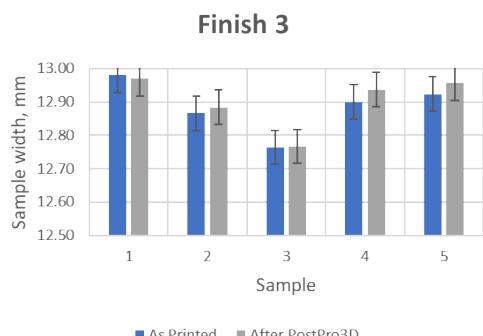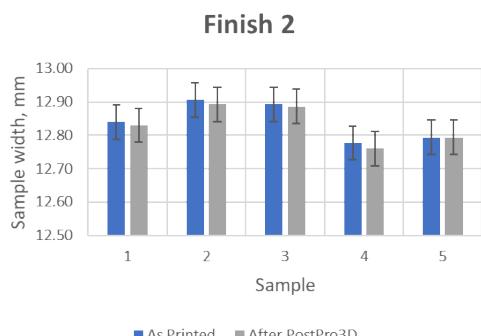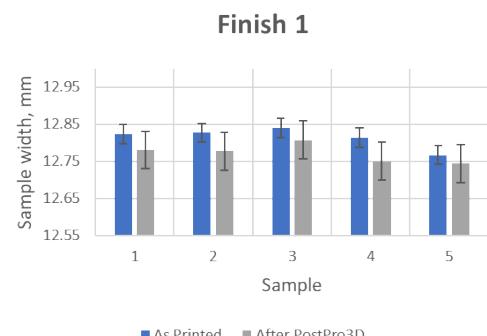


Part Coloring

During the BLAST process, the surface of the material is redistributed in a controlled manner. This enables various surface effects to be achieved on the part, including different black color saturation and level of gloss. The color can be controlled from grey to piano black. This important effect allows, for the first time, HP MJF parts to achieve a 'dyed-like' and smoothed surface in one process.

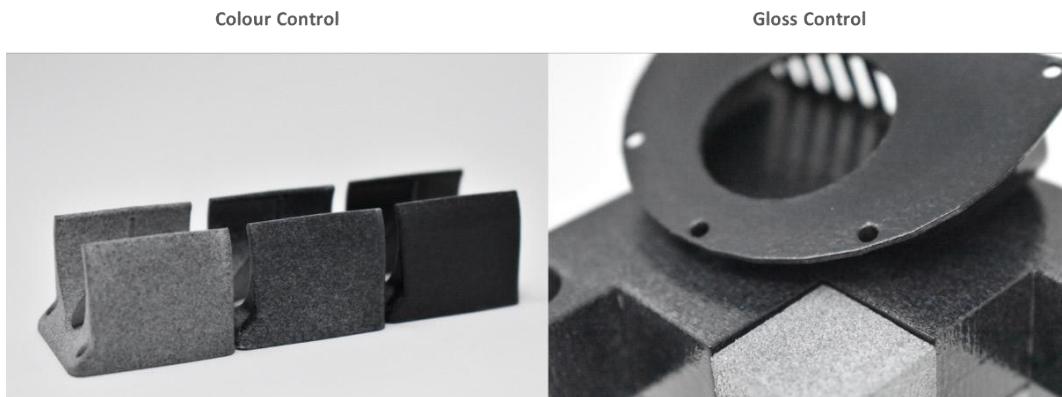

Water Absorption

Water immersion experiments on the samples were completed to investigate the effectiveness of the process to protect the surface of the material from water absorption. Processed and non-processed samples with the surface area of 208 cm² were immersed in water and the weight of the samples was logged with time. Water tends to ‘stick’ to the surfaces of unprocessed samples, which results in higher weight increase for the parts with high surface area. On the other hand, the water is deflected from the surface of the processed samples. The reason for water protective properties is low surface energy of the processed material, which in turn results in high contact angle between the processed surface and water.

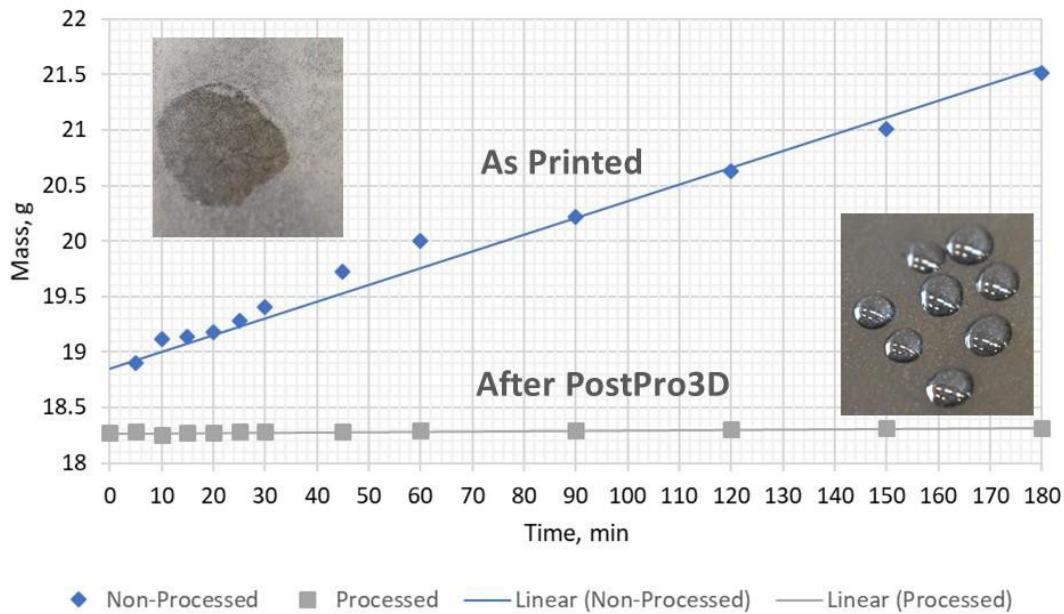


Cytotoxicity

The cytotoxicity test is one of the biological evaluations and screening tests that use tissue cells in vitro to observe the cell growth, reproduction and morphological effects by medical devices. Cytotoxicity is an important indicator for toxicity evaluation of medical devices as it is simple, fast and has a high sensitivity.

Cytotoxicity tests were carried out at a nationally recognized European laboratory to Normative References: ISO 10993-5 (2009); ISO 10993-1 (2010); ISO 10993-12 (2012).

The results show that in the presence of Triton X 100 in the cell culture medium, 6.0 % of the protein content compared to the negative control was reached. This value is within the valid range of 15 % protein content or less compared to the negative control. Materials are considered cytotoxic, if the material extract leads to a protein content of the test cells of less than 70 % compared to the negative control.

This was not the case in this test. The material extract therefore **does not** show a cytotoxic effect.

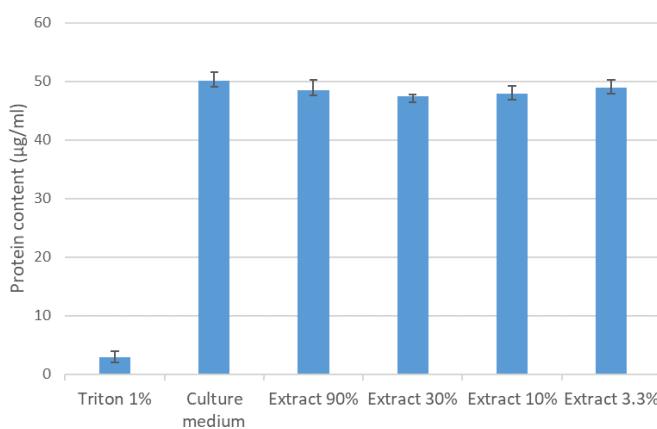

Process Costs

Aerosport Additive will quote the additional cost of smoothing your 3D printed parts directly to you. Pricing depends on quantity of parts processed, complexity of hanging/suspending the parts, level of smoothness desired, etc. Please contact [quotes@Aerosport Additive.com](mailto:quotes@AerosportAdditive.com) for more information on pricing and lead time estimates.



Frequently Asked Questions

What is the additional lead-time of adding smoothing to my 3D printed parts?

Typical additional lead time for the smoothing process is 1-2 days.

Does the process work with every part geometry?

Most geometries can be processed. The PostPro3D machine can smooth complex non-line-of-sight lattice structures and sections as thin as 1mm. Sections thinner than 1mm can also be smoothed but structural deformation is increasingly likely.

Can the smoothing process be combined with other finishing processes?

PostPro3D smooths MJF parts and provides them with black color saturation. Additional processing steps such as dyeing parts black before PostPro3D process may be done to increase the black-color saturation. In addition, by smoothing the surface the PostPro3D process helps to remove the requirement for intermediate coating steps in coating or electroplating procedures.

Does AeroSport Additive need to prepare the plastic parts before smoothing them?

The parts must to be de-powdered and clean of any contamination before the smoothing process.

Is there any risk in damaging plastic parts by smoothing them?

The parts are suspended in the chamber on the provided frames using racks, wire or the like avoiding contact with the inner chamber walls and other parts, otherwise there is a risk of leaving permanent contact marks on the surface. It is recommended to process the components of similar colors together to avoid cross-color contamination. In case of very thin (<1mm) sections there is a risk of structural deformation due to residual stresses experienced within the parts during processing.

Does smoothing work with colored parts?

The process works with dyed and un-dyed MJF parts.

Is it possible to adjust the surface quality? (smooth/matte etc.)

Yes. Through the modification of several process parameters it is possible to adjust both roughness level and surface quality of the part.

What surface roughness can be achieved?

Surface roughness less than 1µm can be achieved which is comparable to injection molded finish.

If I request the same parameters twice, will I get the same results?

Yes, you will get the same results batch to batch.





What are the maximum/minimum dimensions of parts that can be processed?

Providing the parts are suspended on the frames in a way they do not touch the chamber walls or other parts, the chamber can be fully loaded with parts. The dimensions of the chamber are 600 x 400 x 400mm.

Can I see an example finish on my HP MJF part?

Yes, please contact Aerosport Additive to discuss the best way to see parts in person with a visit from one of our Business Development Managers. We also have an extensive photo and video library and can send you examples digitally.

Contact Information



Phone Number: 614-834-5227

Email: info@aerosportmodeling.com

Copyright © 2019 Aerosport Additive, Inc. All rights reserved. Aerosport Additive and the Aerosport Additive logo are trademarks or registered trademarks of Aerosport Additive, Inc. All other company and/or product names may be trademarks or registered trademarks of their owners.

info@aerosportmodeling.com